


AMPLIFIER PREP

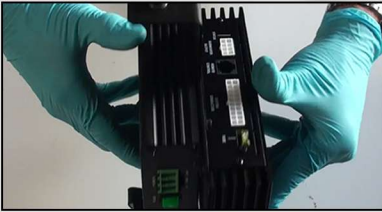


Use provided mounting hardware to secure Dedicated Subwoofer Amplifier to Bracket. Position spacers between Sub Amp and Bracket Assembly




Use 3MM Hex Key to tighten the four M4 Cap Screws. Leave Cap Screws loose until all locations are threaded and then proceed to tighten.

HARNESS PREP

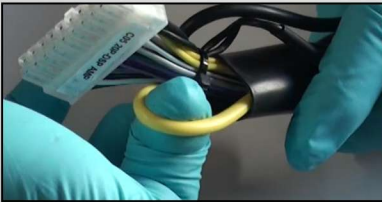

Pull the available Power and Ground wires tucked into sleeve of Quick-Sync Wiring Harness.

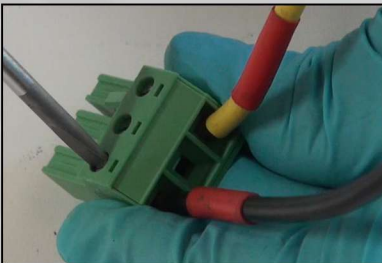

Use a flat head screwdriver to open the captive compression clamp. Rotate screw clockwise to open clamp. Removed the pre-sliced insulation from the wire and insert. Close the clamp and secure the designated wire into place by turning the screw clockwise.

With the Amplifier Assembly mounted and the Quick-Sync Wiring Harness Prepped, you're ready for your installation.